



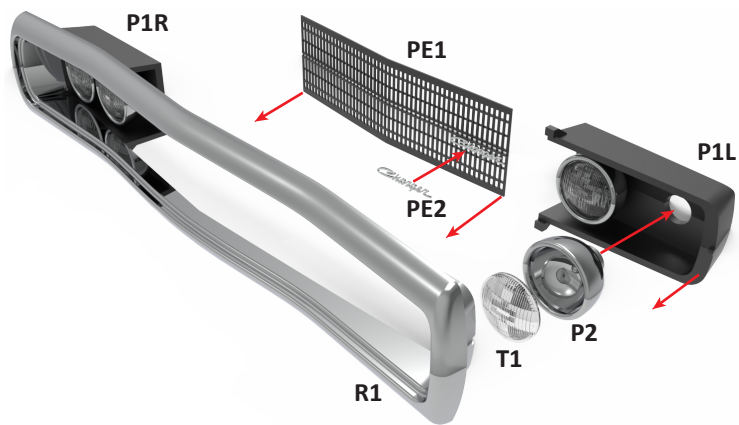


replace original parts
from the kit

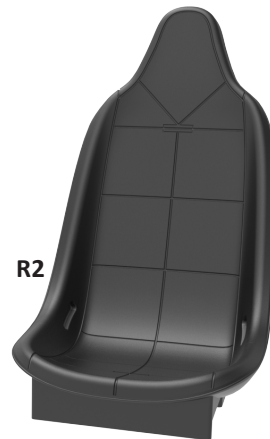






Dom's '70 Dodge Charger F&F Detail-up set for Revell

RW25002

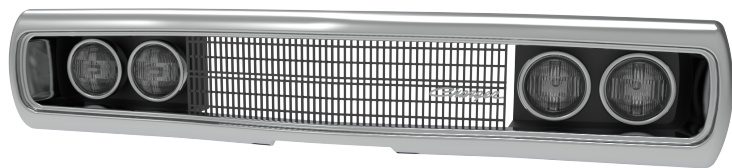


redwheelmodels.com

Assembly instruction

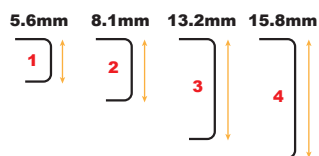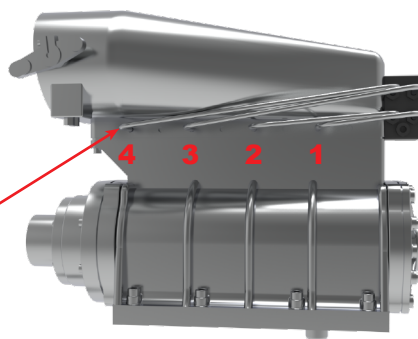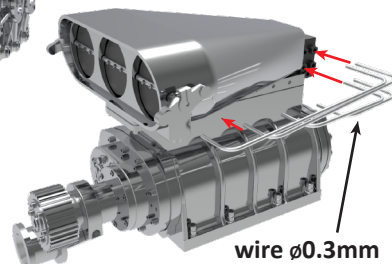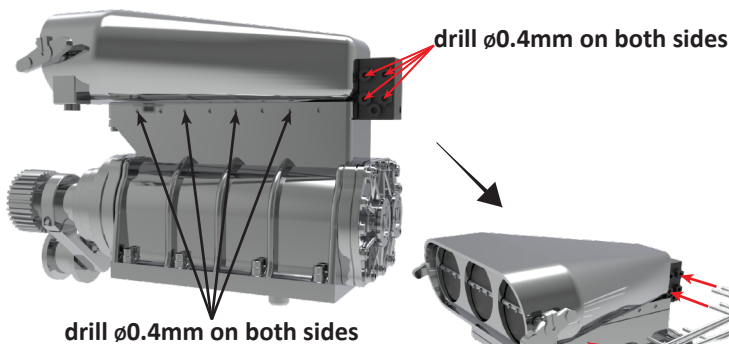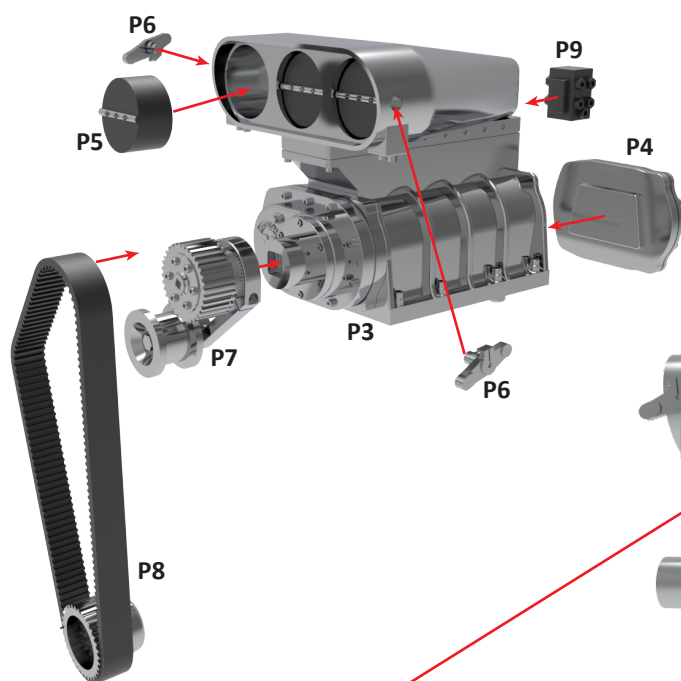

use to bend ø0.3mm wire

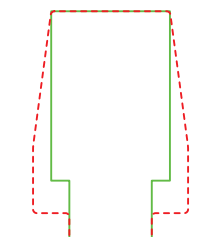

use a template
to cut the hood

replace original parts
from the kit